

The draft, whether produced by a chimney or by means of fans, should be ample at all times. Chimney-draft is called natural draft, while all forms of mechanically produced draft are termed artificial draft.

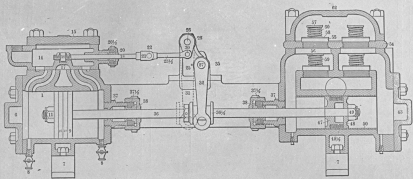


FIG. 4. Section of Feed-water Pump.